



Applicable for:  
TQ

Fittings need maintenance to function optimally and should therefore be lubricated twice a year, or as needed.

It is recommended to use a lubricating oil that corresponds to the properties of Würth HHS 5000.

Top guided fittings are lubricated in all joint connections by repeated activation, so that the lubricant migrates between the moving arms.

The lubrication is applied both on outside of the joints and in the space between the arms.

For this, a lubricating oil is used who penetrates and expands at the same time.

The sliding rail must not be lubricated but must be cleaned and kept free of dust and dirt.

