



Applicable for product codes:
All NTech windows and balcony doors

FORSLAG TIL SAMMENSETTING PÅ BYGGEPLASS. SUGGESTION OF COUPLING ON BUILDING SITE.

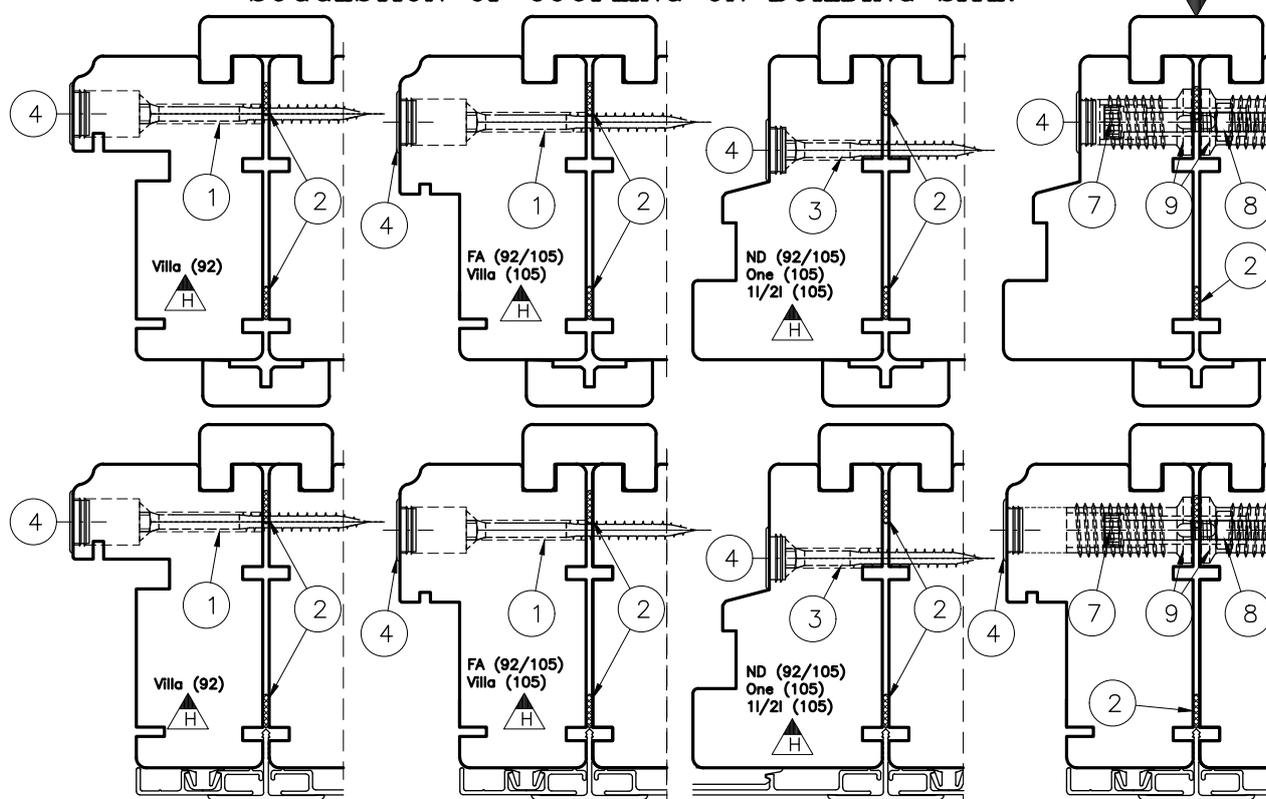

Løsning uten foringsspor.
Option without lining
board groove.

Polyurethan fugemasse/
Adhesive/sealant

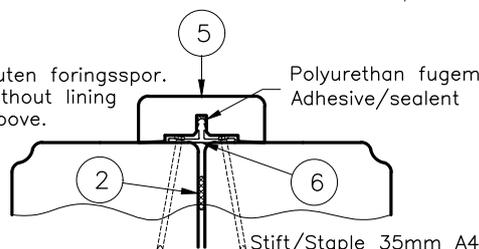

147mm lengder av
Ras310 monteres med
500mm c-c avstand.

147mm lengths of
Ras310 fitted at
500mm centres.


Ved sammensetting, legg på rettholt for å påse at vinduene flukter. Under montering, må plassering og antall skruer vurderes. Høyde opp til 588: 2stk. Høyde over 588 til 988: 3stk. Høyde over 988 til 1488: 4stk. Høyde over 1488: 5stk.

When composition, apply a traightedge to ensure that the windows are flush. During installation, the location and number of screws should be considered. Hight up to 588mm: 2 screws. Hight over 588 to 988mm: 3 screws. Hight over 988 to 1488mm: 4 screws. Hight over 1488mm: 5 screws.

Når Adjufix er montert, skal del nr: 7 og 8 følge med.

When Adjufix is mounted, part no: 7 and 8 comes with.

Skruer plassering, begynner 100mm fra topp/bunn og fordeles med lik avstand.
Screw placing, starting 100mm from top/bottom and distribution with equal distance.

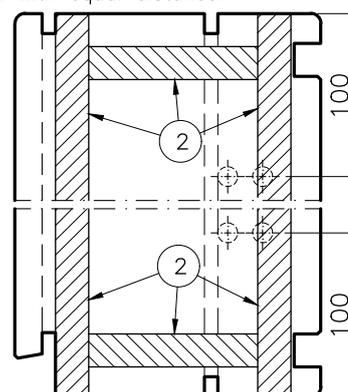

9	070098	Karmskrue adjufix WM28	
7	0470367	SYLINDERSKRUE M6X45 INSEKS Elozn	
5	019231199	14x38 List furu	
3	070358	SE Tre 6,0x60/36 T17 TX30 Dac	
1	070359	SE Tre 6,0x70/42 T17 TX30 Dac	
Pos.	Art.Nr.	Beskrivelse.	Ant.

8	070372	MUTTER M6 DIN 934 8 ZG	
6	0402687	Alprof RAS 5310 0,147M untreated	
4	0400737	DEKKPROPP 19-14 0006 HVIT	
2	050018	TETNLIST E PROFIL 5X10mm SORT	
Pos.	Art.Nr.	Beskrivelse.	Ant.

ND Sammensetting

Monteringsanvisning

Vertikale sammensettinger for Vinduer og Dører.

SAMMENSETTING BYGGEPLASS.

Gen. Tol.:

Konstr: 23.01.03
Godkj: 11.11.20
Rev: 10.11.20
Mål: 1:2

Sign: Vcb
Sign: KL
Sign: AOS

Henv: 851-03 RND

Tegn.nr: R110010

AMW Rev: A

Rev: I